

# Cellular Shade with Cordless & Cord Loop Clutch

## Installation Instructions

**BLINDSTER**

Email: [customerservice@blindster.com](mailto:customerservice@blindster.com)

Call us: (888) 256-8672

Mon - Fri 8am - 7pm (CT)

Congratulations on purchasing a Cordless & Cord Loop Clutch Cellular Shade from Blindster. To learn how to install your new window treatment properly, please follow the instructions below.

### Tools you'll need.

To get started on the installation process for your new shade from Blindster, take the time to gather the following tools:


- Screwdriver
- Tape measure
- Pencil
- Drill
- Drill bits
- Step ladder

### Step 1: Select the Right Fastener for Your Shade

Once you've gathered the tools for the job, you'll need to select the fastener required for your shade.

#### Wood Installations

If you're installing your shade into a wood window frame or door, use the included 1 1/2" #8 hex head screws.

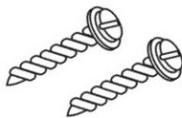

1 1/2" #8 Hex Head  
Wood Screws (Included)

#### Aluminum or Concrete Installations

If you're installing your shade into an aluminum or concrete window frame or door, use alternative fasteners designed for those materials (not included). See the picture below for recommended fasteners.



### Step 2: Mark Mounting Bracket Locations

After you have gathered the correct fasteners for your shade, it's time to mark the mounting bracket locations to prepare for installation.

To get started, position the first two mounting brackets about 2" from each end of the headrail. If your shade is wide enough to require more than two mounting brackets, center them between the two outer brackets with no more than 25" of space between each bracket. Note that extra wide shades may use up to eight total mounting brackets.

Once you've spaced the brackets along the headrail, mark their locations using a pencil for easy reference once you begin drilling. If you're mounting outside of your window, use a level to make sure the brackets will be even.

---


### Step 3: Bracket Installation

With the mounting bracket locations marked, it's time to begin securing them to your window frame or door.

Use the pictures below as a reference guide when drilling the screws or alternative fasteners into your window or wall.


#### Outside Mount Installation

Screw the brackets into the wall as shown in the picture below.

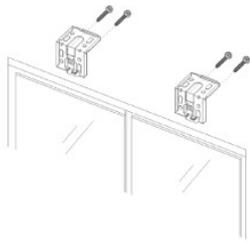

#### Inside Mount Installation

Screw the brackets into the window frame as shown in the picture below.

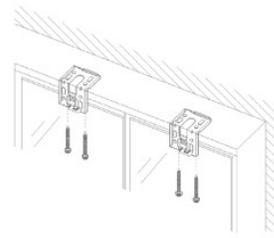

### Step 4: Shade Installation

With the mounting brackets secured to your window frame, wall, or door, it's time to mount the shade and headrail.

To attach the shade, hang it so that the front groove of the headrail inserts into the front ridge of the mounting bracket. Then, rotate the shade back toward the window pane until the headrail snaps into place. Once the shade is snapped into place, give it a slight tug to make sure it's securely locked into place.

### Operating Instructions for Your Cellular Shade from Blindster

To properly operate your new Cordless & Cord Loop Clutch Cellular Shade from Blindster, follow these instructions:

#### Shade with Cord Loop Clutch

---

- **Lowering the Shade**

To lower a shade with a cord loop clutch, simply pull the back cord straight down until the shade reaches the height you desire. Then, release the cord to lock the shade into place.

- **Raising the Shade**

To raise a shade with a cord loop clutch, pull the front cord straight down until the shade reaches the height you desire. Then, release the cord to lock the shade into place.

### **Cordless Shade**

- **Lowering and Raising the Shade**

To lower or raise a cordless cellular shade, simply grab the handle located at the bottomrail of the shade and adjust it up or down until it reaches your desired height. Then, release the shade to lock it into position.