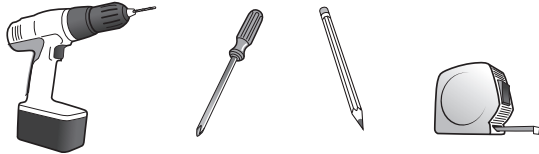








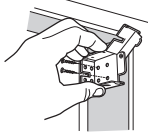
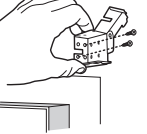
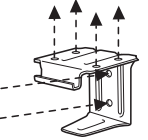


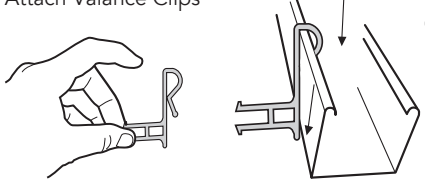

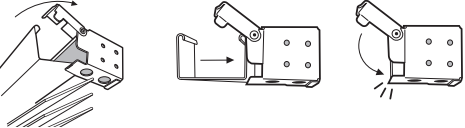

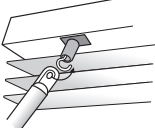
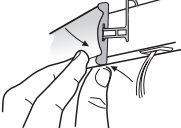





# CORDLESS FAUX WOOD INSTALLATION INSTRUCTIONS

**BLINDSTER®**

Email: [customerservice@blindster.com](mailto:customerservice@blindster.com)

Call us: (888) 256-8672  
Mon - Fri 8am - 7pm (CT)

<p><b>1</b> TOOLS</p>	<p><b>GETTING STARTED - TOOLS NEEDED FOR INSTALLATION</b></p> <p>Rechargeable Drill with 1/4" Hex Bit / Phillips Screwdriver / Pencil / Tape Measure</p> 		
<p><b>2</b> UNPACKING THE PARTS</p>	<p>Locate the parts and brackets in hardware box. The quantity will vary with blind size.</p> <p>Hold-down parts will only be sent for blinds that have requested this option.</p> <p>Center Support Bracket will only be sent for blinds over 37" wide.</p> <div style="display: flex; justify-content: space-around;"> <div data-bbox="922 625 1117 655"> <p>Installation Brackets</p>  </div> <div data-bbox="1182 625 1312 655"> <p>Valance Clips</p>  </div> <div data-bbox="1377 625 1539 655"> <p>Center Support</p>  </div> </div> <div style="display: flex; justify-content: space-around; margin-top: 10px;"> <div data-bbox="922 760 1166 789"> <p>End Cap for Hold-downs</p>  </div> <div data-bbox="1182 760 1360 789"> <p>Hold-down Bracket</p>  </div> <div data-bbox="1377 760 1555 789"> <p>Installation Screws</p>  </div> </div>		
<p><b>3</b> BRACKET PLACEMENT</p>	<p>Left Bracket  Right Bracket </p> <p>IF APPLICABLE: Center Support Bracket</p> <div style="display: flex; justify-content: space-around;"> <div data-bbox="808 1045 938 1075"> <p>Inside mount</p>  </div> <div data-bbox="1198 949 1230 978"> <p>OR</p> </div> <div data-bbox="1247 898 1409 1039"> <p>Outside mount</p>  </div> </div> <div style="margin-top: 10px;"> <p>Inside mount </p> <p>Outside mount </p>  </div>		
<p><b>4</b> VALANCE CLIPS &amp; WAND</p>	<p>Attach Valance Clips </p> <p>Clip on to Headrail</p> <p>Assemble the Wand </p> <p>Snap together where applicable.</p>		
<p><b>5</b> FINISHING UP</p>	<p>Slide into Brackets </p> <p>IF APPLICABLE: Hold-down brackets </p> <p>Attach Wand </p> <p>Install Valance </p> <div style="display: flex; justify-content: space-around; margin-top: 10px;"> <div data-bbox="889 1684 971 1747">  </div> <div data-bbox="1010 1675 1117 1759">  </div> <div data-bbox="1140 1705 1172 1726"> <p>OR</p> </div> <div data-bbox="1205 1675 1302 1780">  </div> </div>		
<p><b>6</b> OPERATING INSTRUCTIONS</p>	<p>Raise or lower the blind by lifting or lowering the bottom rail to the desired height.</p> <p>PLEASE NOTE: This product is made up to +6" of ordered height. Blinds over 84" may include up to 10" of additional height. This is normal for this product and not considered a manufacturing error or defect.</p> <p>Open or close the blind slats by turning the wand until the slats are opened or closed to the desired amount.</p>		