

No Tools 2" Cordless Faux Wood Blinds

NO TOOLS REQUIRED FOR INSTALLATION

Please read these instructions carefully & follow each step for a successful installation.

PACKAGE CONTENTS

One (1) hardware package per blind. Each package includes:

Part	Quantity
Mounting Brackets	2
Alcohol Cleaning Pads	2
Center Support Brackets	0 (for blinds under 28" in width) 1 (for blinds 28 1/8"-36" in width) 2 (for blinds 36 1/8"-48" in width) 3 (for blinds 48 1/8"-60" in width) 4 (for blinds 60 1/8"-72" in width)
3 1/4" Crown Molded Valance	1
Valance Clips	2 (for blinds 28 1/8"-40" in width) 3 (for blinds 40 1/8"-48" in width) 4 (for blinds 48 1/8"-72" in width)

Missing hardware?

Please call (888) 256-8672 to request hardware.

INSTALLATION

***NOTE: DO NOT REMOVE COVERS FROM ADHESIVE STRIPS UNTIL STEP 1 AND STEP 2 ARE COMPLETE**

Step 1: Surface Preparation

The surface that the brackets will be attached to must be clean, dry and have 2" of flat space.

Lightly rub the alcohol pads in the areas where the brackets have been aligned to attach. After, fan these spots with a magazine or piece of paper so the alcohol will dry quickly.

Step 2: Alignment

DO NOT REMOVE COVERS FROM ADHESIVE STRIPS YET. Place the installation brackets on both ends of the head rail. The head rail will fit into the square portion of the brackets (Use tape to hold brackets in place if necessary).

Do the same for the center support bracket(s) if applicable. Center support bracket (s) should be spaced evenly between the two end brackets.

Hold and center the blind with the brackets in place inside the window opening. Mark the placement of each bracket with a light pencil mark. Remove the blinds from the opening and remove the brackets from the head rail.

**NOTE: If the depth of your window opening has 3 1/2" of flat space within the frame and you wish to have the valance flush with the front of the window opening, attach the valance to the head rail before marking bracket locations. Please follow the instructions in Steps 4 and 6 on Page 2. The valance must be detached before mounting the blind.*

Step 3: Mounting Bracket Attachment

One bracket at a time, peel off the thin red layer that covers each adhesive mounting pad. Align each bracket with the corresponding pencil marks.

DO THIS SLOWLY AND PRECISELY - ONCE ADHESIVE TOUCHES THE SURFACE, IT CANNOT BE REMOVED WITHOUT DESTROYING THE BRACKET.

Press each bracket in firmly in place for at least 60 seconds. Wait at least one (1) hour (several hours if possible) before attaching blind to the brackets.

Figure 1: Brackets

End Brackets

Center Support Bracket


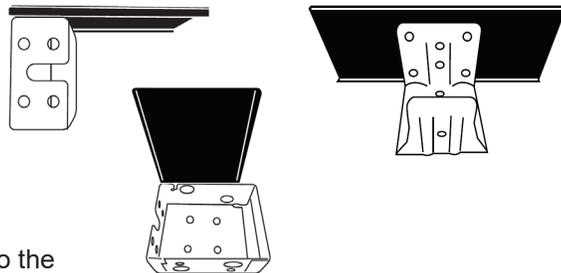



Figure 2: Bracket Attachment

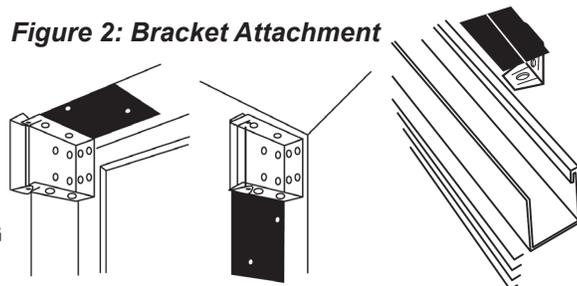

Step 4: Attaching Valance Clips

Attach the clips to the head rail as show in figure 3. Space them evenly across the head rail. Do not attach the valance to the clips until the blind is mounted in the brackets.

Figure 3: Attaching Valance Clips

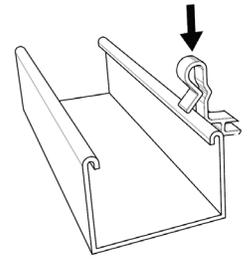


Step 5: Mounting the Head Rail

Open the hinged retainer caps on the end brackets and slide the head rail to fit into both end brackets and all center support brackets. Snap-close the hinged retainer caps of the end brackets.

Step 6: Attach the Valance

Align the channel (opening running across the center of the back of the valance) with the valance clips as shown in figure 4. Let the top of the channel rest on top of the clips and gently press downward and inward until each clip snaps into place.

Figure 4: Attaching the Valance

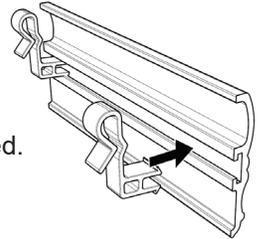



Step 7: Attach the Tilt Wand

The ring that the Tilt Wand is attached to is recessed within the head rail when the blind is packaged. It should slide out when you mount the shade. If it does not, reach in with your fingers and pull the ring out as shown in figure 5.

Hook the wand onto the ring as seen in figure 6 and tilt away from the blind. Please follow the important operating instructions below.

Figure 5: Ring for Tilt Wand

Figure 6: Attaching Tilt Wand

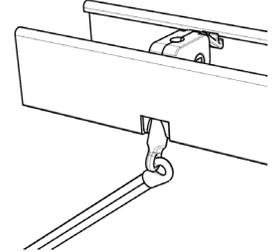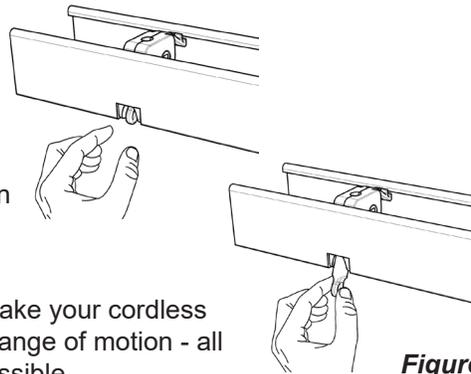


Step 8: How to Operate

IMPORTANT
Operating & Care Instructions for Faux Wood Blinds
READ CAREFULLY

- a. Always rotate the slats to the “open” horizontal position before raising or lowering. This assures smooth operation and increases the life of the product.
- b. To maintain optimal performance of the springs that make your cordless blind function, lift and lower your blind through its full range of motion - all the way up and all the way down - as frequently as possible.
- c. Always raise and lower the blind **SLOWLY** to assure that the slats stack neatly. To lower the blind, grip the bottom rail with both hands and slowly pull straight down. To raise the blind, put both hands under the bottom rail and push up slowly. Examples shown in Figure 7.
- d. Always keep the bottom rail level.
- e. If you have trouble lifting your cordless blind:
If the blind is left in one position for a long period of time, it might be necessary to lift and lower the blind several times to restore normal function. If the blind has been fully raised for a long period of time, it might tend to spring-back (rebound) slightly from the desired length position. This can also be remedied by lifting and lowering the blind several times.

Figure 7: Operating the Blind

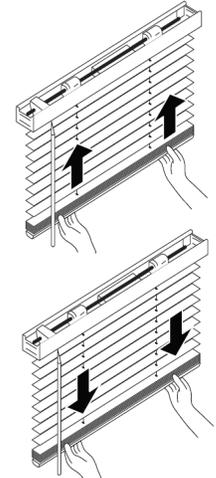

Cleaning Your Blinds

Dusting: Use a soft cloth, feather duster, cylindrical dust brushes specifically designed for blinds or a vacuum using the soft brush attachment.

Washing: Use a cloth, sponge or soft brush and a gentle dish soap. Use warm or cold water, not hot water. Place a dry towel on the floor and/or window sill and wash the blind in sections. Rinse or wipe off suds thoroughly. Towel dry to avoid water marks.

Need Assistance?

Blindster is happy to help!

customerservice@blindster.com

(888) 256-8672

Mon-Thurs 8am - 7pm CT, Fri 8am-5pm CT