

Cordless Aluminum Blind

NO TOOLS REQUIRED FOR INSTALLATION

PLEASE READ THESE INSTRUCTIONS CAREFULLY & THOROUGHLY TO ASSURE A SUCCESSFUL INSTALLATION!

INSTALLATION INSTRUCTIONS

Step 1. Check Package Contents

Missing part? Call 1-800-264-1190



Mounting hardware kit includes the following:

Part	Quantity
Mounting Brackets	2 (blinds up to 36" wide) 3 (36½" to 54" wide) 4 (54½" to 72" wide)
Hold Down Brackets	2
Valance	1
Valance Clips	2 (28½" to 40") 3 (40½" to 48") 4 (48½" to 72")
Tilt Wand	1

Step 2. Bracket Location, Alignment and Installation

Brackets & Mounting Tape: Each bracket is attached to an installation plate. Each Installation Plate has state-of-the-art 3M mounting tape attached to it. This is a powerful, permanent adhesive – care is required to apply it properly.

DO NOT REMOVE THE COVERS FROM THE ADHESIVE STRIPS UNTIL ALL ALIGNMENT AND SURFACE PREPARATION STEPS HAVE BEEN COMPLETED.

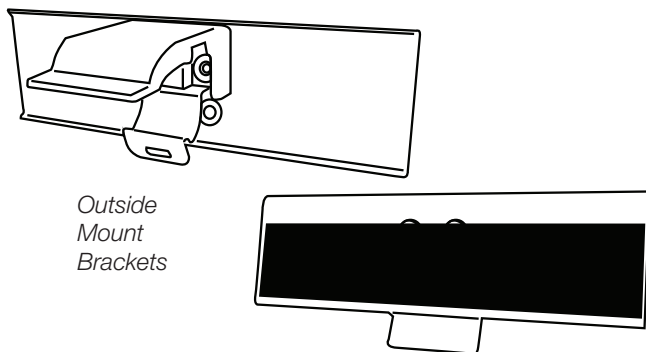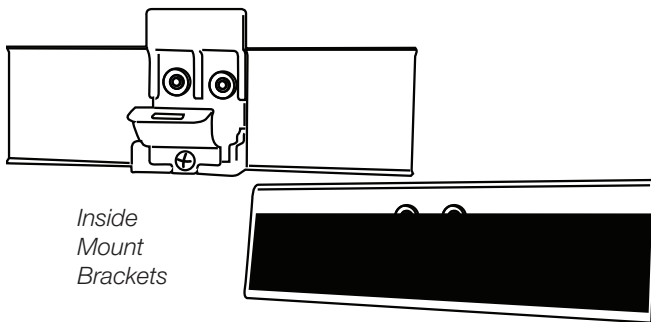

Surface Preparation

The surface that the brackets will be attached to must be clean, dry and flat. Alcohol pads are included to simplify this process. Lightly rub the alcohol where the brackets will be attached, and then fan these spots with a magazine or piece of paper (like these instructions) – the alcohol will dry quickly.


Alignment & Attachment

Your blind may be installed either inside or outside the window opening.

Always position the brackets such that there is no interference with the mechanisms inside the head rail. The front edge of each bracket goes under the inner front edge of the head rail - the flexible tab at the bottom of each bracket snaps onto the back of the head rail.

The procedures outlined below will assure proper bracket placement.

A mounting bracket should be positioned about 1" to 3" from each end of the head rail. For wider shades that require 3 or more brackets, these should be spaced evenly between the two outermost brackets.

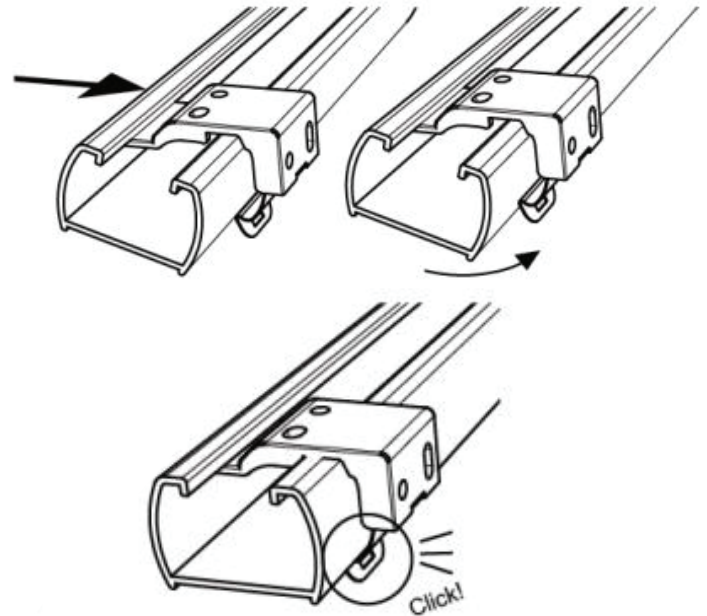

For Inside Mounts

Clip the brackets onto the head rail as described above. Center the blind in the window opening – Hold the shade with the **b Mounts**

Clip the brackets onto the head rail as described above. Hold the blind level at the height desired and center it over the window opening. Mark the exact location of each bracket plate with a pencil. Remove the brackets from the head rail.


Attach the Brackets

Now, one bracket at a time, peel off the thin red layer that covers each adhesive mounting pad. Align each bracket with the corresponding pencil mark – **DO THIS SLOWLY AND PRECISELY – WHEN THE ADHESIVE TOUCHES THE MOUNTING SURFACE IT CANNOT BE REMOVED WITHOUT DESTROYING THE BRACKET ASSEMBLY.**

Press each bracket firmly in place for at least 60 seconds. If practical, wait at least an hour (several hours if possible) before attaching the blind to the brackets. For the first 24 hours try to operate the shade as infrequently as possible.

Step 3. Attach the Valance Clips

Attach the clips to the head rail as shown. Space them evenly across the head rail. Do not attach the valance to the clips until the blind is mounted in the brackets.

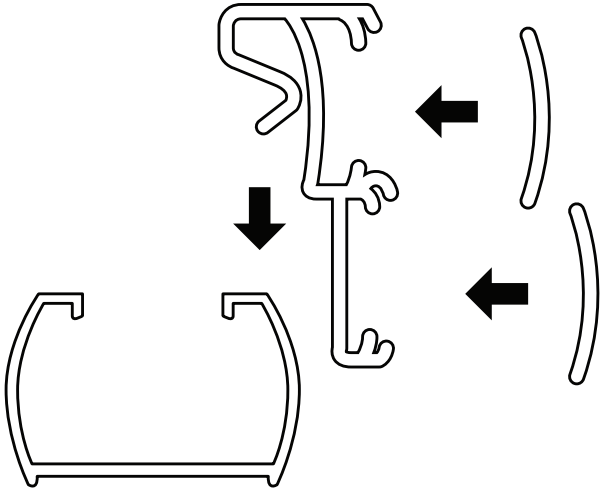

Step 4. Securing the Head Rail

Lift the head rail into position such that the front edge of each bracket is under the inner front edge of the head rail.

Push the head rail upward until the flexible tab at the bottom of each bracket snaps onto the back of the head rail.


Check carefully to assure that each bracket is properly secured.

Step 5. Attach the Valance

Attach the valance slats to the valance clips – the slats can bend, so do this slowly and carefully.

Step 6. Attach the Tilt Wand

Hook the wand onto the tilt ring.

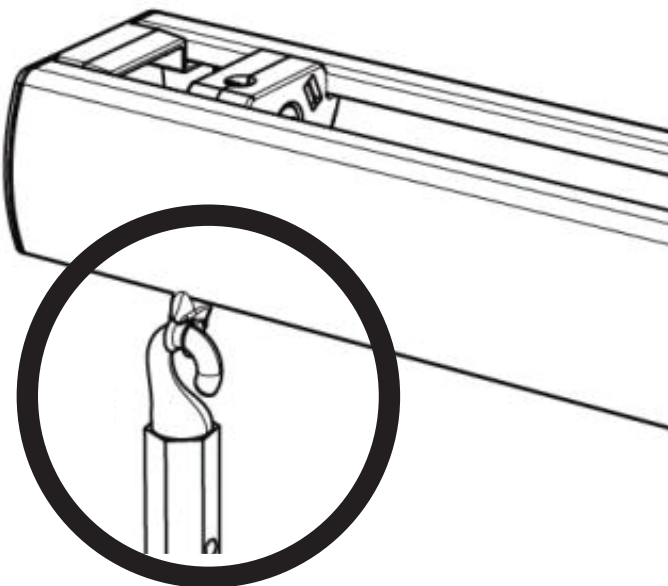


Step 7. How to Operate


IMPORTANT **Operating & Care Instructions for Cordless Blinds** **READ CAREFULLY**

- Always rotate the slats to the “open” horizontal position before raising or lowering. This assures smooth operation and increases the life of the blind.
- To maintain optimal performance of the springs that make your cordless blind function, lift and lower your blind through its full range of motion – all the way up and all the way down - as frequently as possible
- Always raise and lower the blind SLOWLY(!) to assure that the slats stack neatly. To lower the shade: grip the bottom rail with both hands and slowly pull straight down. To raise the shade, put both hands under the bottom rail and push up slowly.
- Always keep the bottom rail level.
- If you have trouble lifting your cordless blind: If the blind is left in one position for a long period of time, it might be necessary to lift and lower the shade several times to restore normal function. If the blind has been fully raised for a long period of time, it might tend to spring-back (rebound) slightly from the desired length position. This can also be remedied by lifting and lowering the blind several times.


To lower blind:
 Grip the center of the Bottom-Rail and slowly pull straight down

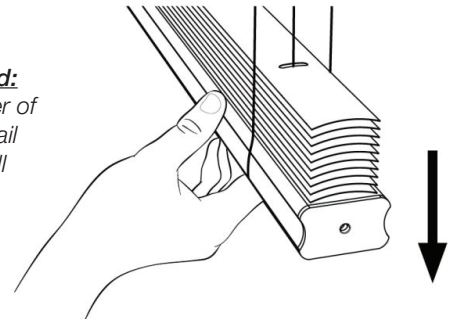

To raise blind:
 Put one hand under the center of the Bottom Rail (palm facing up) and lift with a slow steady tempo until the desired height is reached.

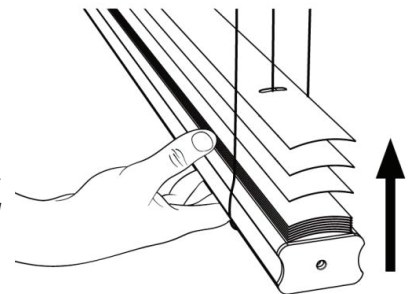

To tilt the slats:
 Rotate the wand to attain desired slat position.

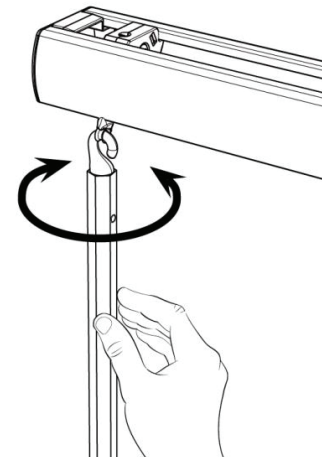

Cleaning your Blinds

Dusting: use a soft cloth, feather duster or vacuum gently using the soft brush attachment.

[Caution: any aluminum slat can and will bend; careful handling is a must]

Washing: use a cloth, sponge or soft brush and a mild detergent. Use warm or cold water, not hot water. Place towel on the floor and/or window sill and wash the blind in sections. Smaller blinds can be washed in

a sink or tub; blinds can also be gently hose washed outdoors. Rinse off suds thoroughly. Drain the head rail and bottom rail; remove end caps if necessary. Towel dry to avoid water marks.

To have your blinds cleaned professionally, check the local telephone directory for a venetian blind cleaning service.

REPLACEMENT PARTS

In the event that replacement parts are ever needed, you may call: 1-800-264-1190

Please be sure to provide the following information, if possible:

- The complete model or catalog number of your product
- A description of the product
- A description of the part needed

LIMITED LIFETIME WARRANTY

The enclosed product is warranted to the original residential retail purchaser as long as the product remains in the original window.

I. Covered:

Lifetime: Entire product against manufacturing defects (i.e. a flaw in the product design, materials, or workmanship that causes the product to no longer function)

3 years: Cords including internal cords such as those found in cordless blinds.

5 years: All fabric

II. Not Covered:

Normal Wear and Tear

Any product that fails due to: • abuse • exposure to salt air • improper installation • accident • extraordinary use • improper operation • alterations • improper cleaning • misapplication • damage from pests/insects/pets • improper handling • misuse

III. Costs associated with: • product removal • transportation to and from the retailer • brand label removal • product re-measure • incidental or consequential damages • product re-installation • shipping

In the event there are multiple blinds/shades in the same room, only the defective blind/shade will be replaced.

IV. To Report Shipping Damage: If damage occurred during shipping, call place of purchase and report within 7 calendar days or else you may be denied credit for your damaged product.

V. To Obtain Service: If you suspect this product has a manufacturing defect in materials or workmanship:

1. Locate the sales receipt
2. Call place of purchase. Any unauthorized returns will not be accepted.

VI. Warranty Remedy: **THIS SHALL BE YOUR SOLE**

REMEDY UNDER THIS LIMITED WARRANTY.

If this product is found to have a manufacturing defect in materials or workmanship, we will (at our discretion) do one of the following:

- repair the product
- replace the product
- refund the cost of the product

Colors vary from lot to lot and may not exactly match sample swatch or previous purchases.

Discontinued items or color selections will be replaced with the closest equivalent current product.

VII. YOUR RIGHTS UNDER STATE LAW:

This lifetime limited warranty gives you specific legal rights, and you may have other rights, which vary from state to state. Some states do not allow limitations on how long a warranty lasts, so the above limitations may not apply to you. No agent, representative, dealer, or unauthorized employee has the authority to increase or alter the obligation of this warranty. This lifetime limited warranty supersedes any previous versions.

PHASE II PRODUCTS, INC.

501 WEST BROADWAY, SUITE 1350
SAN DIEGO, CALIFORNIA 92101 • 1-800-264-1190